



**KING PILOT**  
**AUTOMATIC CHRONOGRAPH**  
**ETA/Valjoux 7750 - SWISS MADE**

**ISTRUZIONI - CONSIGLI D'USO**  
**INSTRUCTIONS - DIRECTIONS OF USE**

 
## CONSIGLI D'USO

Non azionare mai i pulsanti e la corona quando l'orologio è bagnato. Assicurarsi che la corona sia sempre ben avvitata. Evitare in ogni caso impatti violenti (es tuffi). Dopo aver immerso l'orologio in acqua salata, lavarlo con acqua dolce e quindi asciugarlo. Non esporre l'orologio ad alte temperature (al di sopra dei 60°C / 140°F) per periodi prolungati. Evitare di tenerlo a contatto con profumi, benzina, solventi e altre sostanze simili. Se necessario chiedere al personale tecnico di verificare lo stato delle guarnizioni.

**Per un corretto funzionamento del Vs orologio automatico vanno seguite e conosciute queste regole fondamentali:** Ricaricare l'orologio manualmente la prima volta e ogni volta che rimane fermo. Per i movimenti a sola carica manuale si consiglia di caricarli ogni 48 ore. Va ricordato che questi movimenti hanno una tolleranza nelle 24 ore di + o - 5/10 secondi e che l'orologio automatico è pur sempre un orologio meccanico e che il suo inutilizzo per tempi prolungati può richiedere una messa a punto da parte di personale esperto e autorizzato. Evitare di cambiare la data quando le lancette sono tra le 11 PM e le 1 AM.

# COMPONENTI PRINCIPALI


Automatico ETA 7750 VALJOUX swiss made

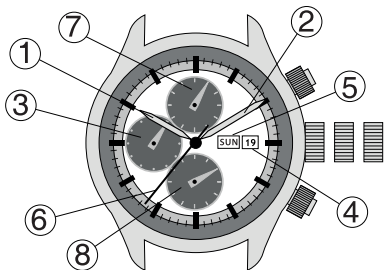

- 1 - Lancetta delle ore
- 2 - Lancetta dei minuti
- 3 - Lancetta dei secondi
- 4 - Datario
- 5 - Giorno della settimana
- 6 - Contatore 60 secondi
- 7 - Contatore 30 min
- 8 - Contatore 12 ore

# UTILIZZO DEL CRONOGRAFO

 Automatico ETA 7750 VALJOUX swiss made

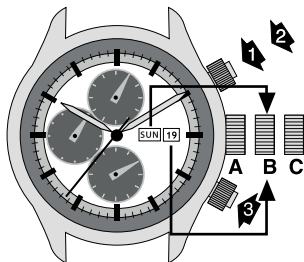

## PULSANTI DI COMANDO:

- 1 - Avvio del cronografo
- 2 - Arresto del cronografo
- 3 - Reset del cronografo

## CORONA A 3 POSIZIONI:

A - Posizione di carica

B - Correzione rapida della data girando nel senso della carica.

\* Attenzione: correzione della data impossibile tra le ore 20 e 2.

Correzione rapida del giorno girando nel senso contrario della carica.

C - Posizione di messa all'ora precisa, si consiglia di superare il minuto desiderato poi portare indietro la sfera nella posizione esatta.

## DIRECTIONS OF USE

Don't move push-buttons and crown when the watch is wet.

 
Be sure that the crown is always completely screwed.

Avoid violent strokes (eg diving). After every immersion in salt water, wash the watch with fresh water and dry it. For proper preservation of the leather strap, contact with water is in any case not recommended. Don't expose the watch to high temperatures (over 60° c/140° F) for a long time. Avoid to keep it in touch with perfumes, petrol, solvent and other similar substances. If necessary, ask the technical staff to check the gaskets.

For a correct functioning of yours automatic watch these rules must be known and followed: charge the watch by hand the first time, and every time it stops. For movements with hand charge only, it is recommended to charge them every 48 hours. Keep in mind that this movements have a tolerance of more or less 5 seconds in the 24 hours and that the automatic watch is still a mechanical watch, and not using it for a long time could require an adjustment by expert and authorized staff. Avoid changing the date when the hands are between 11 PM and 1 AM.

## MAIN COMPONENTS


Automatic swiss made ETA 7750 VALJOUX

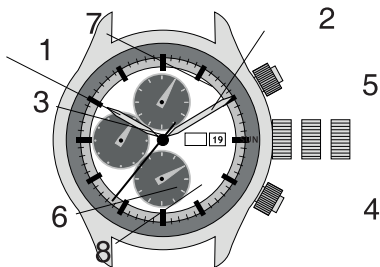

- 1 - Hour hand
- 2 - Minute hand
- 3 - Small second hand
- 4 - Date
- 5 - Day
- 6 - 60 seconds counter
- 7 - 30 minutes counter
- 8 - 12 hours counter

# HOW TO USE THE CHRONOGRAPH

 Automatic swiss made ETA 7750 VALJOUX

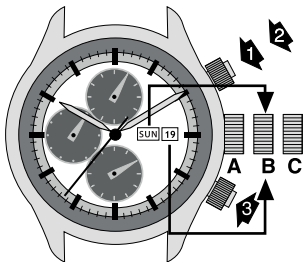

## PUSHERS

- 1 - Start of the chronograph
- 2 - Stop of the chronograph
- 3 - Reset of the chronograph

## 3 POSITIONS CROWN

A - Charging position































B - Quick date adjustment by turning the crown

\*Please note: impossible to change date between 20 PM and 2 AM.

Quick day adjustment by turning the crown counterclockwise.

C - time setting position. It's recommended to pass the desired minute, then move the hand backwards to the exact position.

## USO CORRETTO DELL'OROLOGIO CORRECT USE OF THE WATCH

WR (WATER RESISTANT)						
30 M (3 ATM)						
50 M (5 ATM)						
100 M (10 ATM)						
200 M (20 ATM) 300 M (30 ATM)						

# UBLAST watch

[www.ublastwatch.com](http://www.ublastwatch.com)